

Self Adhesive Foamboard




InSite® Reveal® Self Adhesive is an extruded polystyrene foamboard with clay coated liners featuring our proprietary Reveal memory foam center faced on one side with smooth, clay coated paper and either Low-Tack or High-Tack pressure-sensitive adhesive surface on the other. InSite Reveal Self Adhesive Low-Tack has a repositionable adhesive allowing for multiple placements prior to bonding with plastic squeegee or rubber roller. InSite Reveal Self Adhesive High-Tack is an aggressive adhesive that immediately grabs to paper and photo media so correct placement the first time is essential. Place all mountings under weight during first few hours for best results. InSite SA is available white or black, 1/8" and 3/16" thicknesses, in sizes ranging from 24"x36" to 48"x96".

Mounting Instructions

Application is quick and easy with simple peel and stick activation. InSite Self Adhesive may be used manually with a soft rubber roller or hard plastic squeegee, with a cold vacuum press or roll laminator.

Depending on your needs, select Low-Tack, with the green text liner, or High-Tack, with the black text liner.

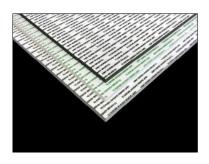

Manual Application



1. Peel back the end of the liner 2"-4" depending on the size of your image and crease it to expose the adhesive.



4. Cover the image with the removed release liner.



2. Square the opposite end of the image to the bottom of the board to be sure it is properly aligned, then hand slide up and gently press the image against the exposed adhesive.



5. Smooth the image from the center to the outer edges to make sure all air has been removed.



3. Grasp the folded end of the liner under the image and pull to remove smoothing the image against the adhesive.



6. It is best to place newly mounted image under a weight until full cure,8-10 hours, or mount using a cold vacuum or roll laminator.

WARNING: Foamboard is combustible and may constitute a fire hazard if improperly used. Do not expose to flame or other ignition source as this product may burn rapidly. For more information and MSDS sheet call Gilman Brothers Company at 860-889-8444 (ISAI-092214)